



## instructions manual



**TT-CJ300**

**Electric Citrus-fruit juice squeezer**

[www.zline-world.com](http://www.zline-world.com)

---

Dear customer,

Many thanks for choosing to purchase TT-CJ300 Electric Citrus-fruit juice squeezer by **TurboTronic**.

Thanks to its technology, design and operation and the fact it exceeds the strictest quality standards and a fully satisfactory use.

### **Safety advice and warnings**

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions may result in an accident.
- Clean all the parts of the product that will be in contact with food, which indicated in the cleaning section, before use.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by manufacture its service agent or similarly qualified persons in order to avoid hazard.
- Disconnect the appliance and unplug the mains if you leave it unattended and before changing the accessories or nearby moving parts, assembling, dismantling or cleaning.
- If the connection is damaged it must be replaced. Take the appliance to an authorized Technical Assistance Service. Do not try to dismantle or repair it without assistance, as this may be dangerous.
- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- Connect the appliance to a base with an earth socket withstanding a minimum of 10 amperes.
- The appliance 's plug must put into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Keep the working area clean and well lit-Cluttered and dark areas invite accidents.
- The appliance should be used and kept over around at and stable surface. Do not use the appliance if the cable or plug is damaged.
- If any of the appliance casings breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Never use the electric wire to lift up, carry or unplug the appliance
- Ensure that the electric cable does not get trapped or tangled.

-Check the condition of the electrical connection cable. Damaged or tangled cables increase the risk of electric shock.

-This appliance is not suitable for outdoor use.

-The power cord must be regularly examined for signs of damage and if damaged, the appliance must not be used.

—Do not touch the plug with wet hands. -Take the necessary measures to avoid starting the appliance involuntarily.

### Use and care:

-Fully unroll the appliance's power cable before each use.

-Do not use the appliance if its accessories are not properly correct.

-Do not move the appliance while in use.

-Do not use the appliance if it is tipped up and do not turn it over.

-Do not turn the appliance over while it is in use or connected to the mains.

-This appliance is for household use only, not professional or industrial use.

-Store this appliance out of the reach of children and/or those with reduced physical, sensory or mental abilities or those unfamiliar with its use.

-Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

1. Cone cylinder (attached to the handle)

2. Juicer cones

3. SS filter


4. Juice plate

5. Connecting rod

6. Handle

7. Body

8. Base

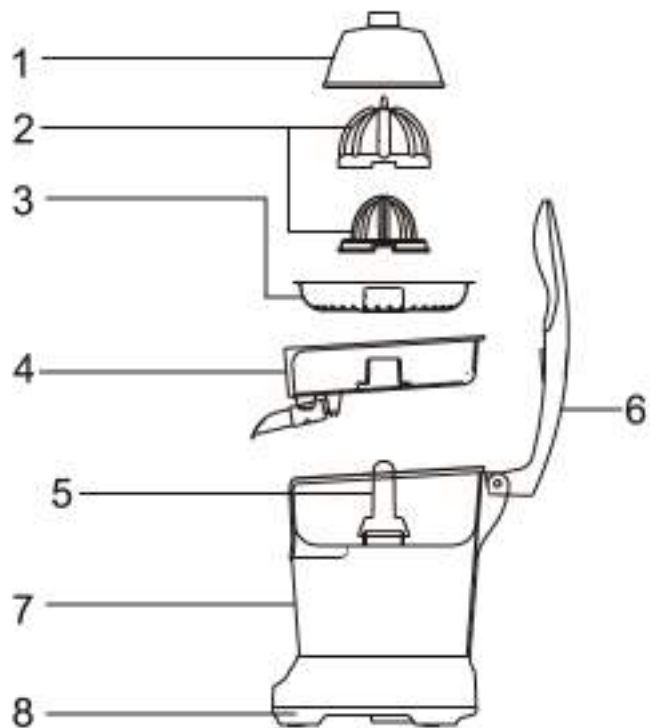

---

## **Instructions for use**

Before use:

- Make sure that all the product's packaging has been removed.
- Before using the product for the first time, clean the parts that will come into contact with food in the manner described in the cleaning section.

Use:

- Unroll the cable completely before plugging it in.
- Connect the appliance to the mains.
- Cut the citrus fruit to be squeezed in half.
- Place a glass under the anti-drip valve.
- Turn on the appliance by pushing down with the pressing handle on the piece of citrus fruit, once it has been placed on the juicing cone.
- To stop the appliance, simply stop applying pressure to the cone.
- Remove the cone and strainer assembly in order to empty the jar.

Note: If you process large quantities of fruit, you will need to clean the filter and remove the residual pulp on a regular basis.

## **Cleaning**

- Disconnect the appliance from the mains and let it cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvent, or products with an acid or base ph such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap. It is advisable to clean the appliance regularly and remove any food remains
- If the appliance is not in good condition of cleanliness, its surface may degrade and inexorably affect the duration of the appliance's useful life and could become unsafe to use.
- The appliance is suitable for cleaning in hot soapy water or in a dishwasher (using a soft cleaning program).
- Next dry all the parts before fitting them together and storing.

## **Warranty Information**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g., overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g., connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

**TT-CJ300**

220-240V~, 50/60Hz, 300W , Class II: